 



WHAT'S IN THE BOX?



Spark MINI Amplifier



 
Carrying Strap

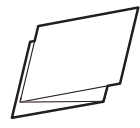

Quick Start Guide



 Safety Instructions

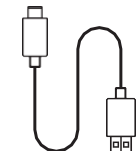

USB-C to USB-A Charging Cable

GET STARTED

Download and install the Spark app that is compatible with your mobile device.

Pairing Spark MINI and the Spark app



App Store
iOS 11 or later

Google Play
Android 8 or later



+



+



 
- Download the Spark app using the QR code above or search for "Spark amp" in the App Store or Google Play.

- Turn on Spark MINI by holding the Power Button until the LED lights up and open the Spark app on your mobile device.


- Tap Connect and the Spark app will search for your Spark MINI. Select yours from the list and you're done!

1

Using Spark MINI as a Guitar Amp

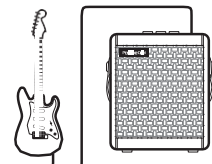


 - Plug your guitar into the Guitar Input jack on the top control panel.

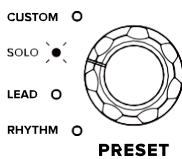

PRESET

 
- Select one of the four presets available and adjust the volume by using the Guitar Volume knob on the top control panel.

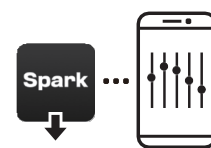


- To access more tones, download the Spark app using the QR code on page 1 or search for "Spark amp" in the App Store or Google Play.

2

 Using Spark MINI as a Wireless Bluetooth® Speaker

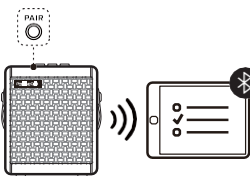

 - To pair a new device, press the Pair button on the rear panel, turn Bluetooth® on in the settings of your mobile device, and select "Spark MINI Audio" from the list of scanned devices.

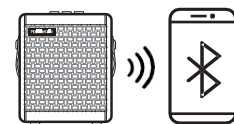

- Spark MINI will automatically pair with the last device it connected to. If the last device is not available, Spark MINI will automatically connect to a device that has been previously paired.

3

TOP CONTROL PANEL

A Power Indicator

- Indicates power and battery status.
- Solid Green: Powered on or fully charged
- Solid Red: Low battery
- Flashing Red/Green: Charging

B Bluetooth® Indicator

- Indicates the status of your Bluetooth® audio connection.
- Solid Blue: Connected
- Flashing Blue: Pairing

C Preset Selector

- Turn the knob to select one of the four presets stored on Spark MINI. The red LED indicates the preset currently in use.

D Guitar Volume

 
 
- Adjusts the overall volume of your guitar.

E Music Volume

- Adjusts the sound volume of Bluetooth® devices, AUX IN, and USB audio playback.

F Guitar Input

- Plug in your guitar with a standard 1/4" (6.3mm) guitar cable.

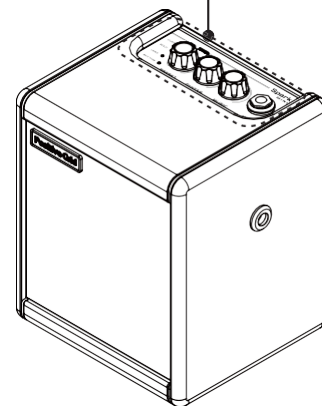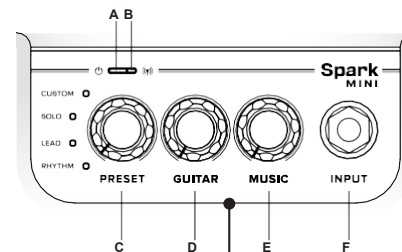

REAR PANEL

G Headphone / Line Out (3.5mm)

- Plug in a pair of headphones with a 3.5mm jack. Please note that sound will not come out of Spark MINI's main speaker when headphones are plugged in.

H AUX IN (3.5mm)

- Connect the analog output of an audio device to this port. Please note that USB audio playback and Bluetooth® audio will be disabled when this port is in use.

I USB Port

 
 
- Connect the supplied USB-C to USB-A cable to charge Spark MINI or connect to a PC/Mac to use as an audio interface.

J Pair / Tuner Button

- Press to enter Bluetooth® pairing mode when connecting to a new device. Hold to enter the tuner mode.

K Power Button

- Hold to turn on or turn off Spark MINI.

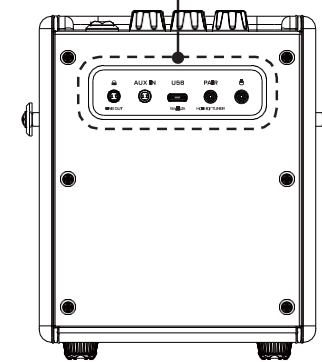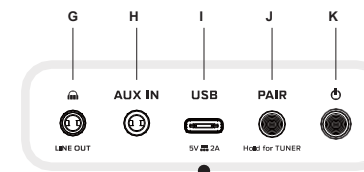

4

Positive Grid®




Visit our online Help Center for user manuals, FAQs, or to contact our support team: help.positivegrid.com

HEADPHONE / LINE OUT PORT

The 3.5mm headphone/line out port on the rear panel can be assigned as a stereo output for connecting headphones or speakers with a stereo input. It can also be used as a mono output for connecting guitar amps, powered guitar cabinets, mixers, or audio interfaces.


Output mode options can be found in the Spark app settings.

***Please note that a 3.5mm to 1/4" or RCA adapter (not included) may be required to connect certain devices.**

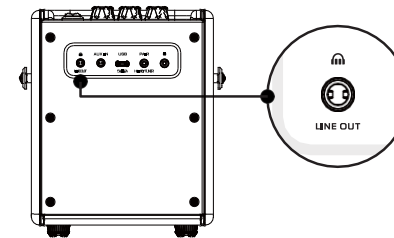 


Stereo Mode

 For headphones or speakers with a stereo input. (This mode is on by default)

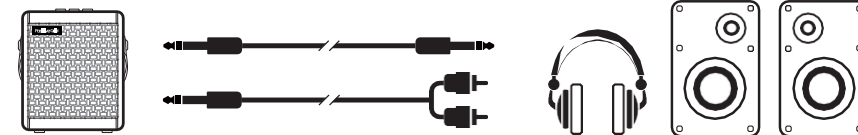


Mono Mode

 For guitar amps, powered guitar cabinets, mixers, or audio interfaces with a mono input.

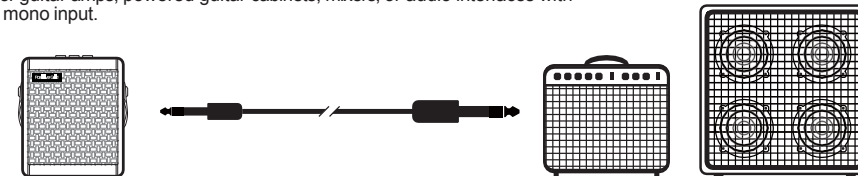


TUNER MODE

 - Hold the Pair button to enter tuner mode.
- While in tuner mode, the 4 Preset LED's will measure the note being played.
- Please note that your guitar signal will be muted while tuner mode is on. To exit tuner mode, press the Pair button again.

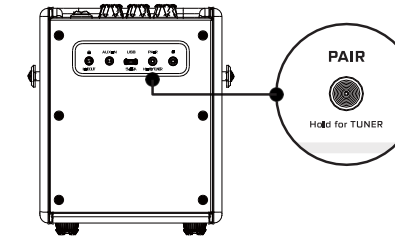


***Tuner mode is set to standard chromatic tuning at 440 Hz.**

 Standby

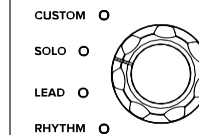


No signal detected.

 Note Too High

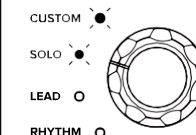


The note detected is sharp.

 Note Too Low

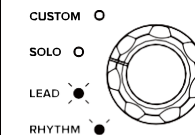

The note detected is flat.

 Note In Tune

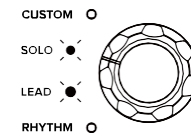

The note detected is in tune.

Positive Grid®

Welcome to Spark MINI.
Check out this guide to start jamming
anytime, anywhere.

Spark
MINI
QUICK START GUIDE